

ENFORCER[®] IMMOBILIZER

ROUND PLUG SLI[®] 760RP-H2B

With **MASTER CODING** for **PRELOADS**

MASTER CODING PROCEDURE

The SLI 760RP-H2B is supplied with two User Controllers already coded in and can be sold as an immobilizer to any end user.

TO CODE A MASTER CONTROLLER (IF UNIT IS CODED TO USER CONTROLLER)

Each time code learning mode is entered all existing controllers will be deleted.

1. With system disarmed, turn the ignition switch ON.
2. Enter first digit of the security code via VECL switch.
3. Turn ignition switch OFF.
4. Repeat steps 1 to 3. This time enter second digit of the security code. The LED will turn OFF.
5. Within 15 seconds insert Master Controller into socket. Wait until LED turns steady ON, and remove the Master Controller. Master Controller is learned and all previously learned User Controllers are deleted.
6. Learning mode will be terminated once ignition is switched ON or 15 seconds of inactivity occur.

TO CODE A USER CONTROLLER (IF UNIT IS CODED TO MASTER CONTROLLER)

1. With system disarmed, turn the ignition switch ON.
2. Enter first digit of the security code via VECL switch.
3. Turn ignition switch OFF.
4. Repeat steps 1 to 3. This time enter second digit of the security code. The LED will turn OFF.
5. Insert User Controller into socket within 15 seconds. Wait until the LED turns steady ON, and remove the User Controller. The User Controller is learned and the Master Controller is deleted.
6. To learn more User Controllers, repeat step 5.
7. Learning mode will be terminated once ignition is switched ON, or 15 seconds of inactivity occur, or the maximum of 5 smart keys have been learned.



USER CONTROLLER
Two included with each unit. Given to the consumer purchaser once the car is sold.

MASTER CONTROLLER
Red in color, with a tag indicating specific Master Code. All Master Controllers can have the same code at the dealership lot. Master deleted once User coded in.



DEALER DELETE PLUG
Plugs into wire harness if immobilizer needs to be removed from the car.

NEW!

ENFORCER[®] IMMOBILIZER[®]

ROUND PLUG SLI[®] 760RP-H2B

With **MASTER CODING** for **PRELOADS**

The SLI 760RP-H2B Round Plug Immobilizer combines high security with simple operation. To arm the system, turn the ignition off. The LED will begin to flash quickly to indicate that the SLI 760RP-H2B will arm in 30 seconds. Once the 30 seconds has elapsed, the Immobilizer automatically disables the car's starter, ignition, and/or fuel systems. The LED will also change to a slower flash rate to indicate the circuits are disabled. To disarm, insert the User Controller into the Disarm Socket and remove it. The LED will turn off, and the vehicle can now be driven.

The SLI 760RP-H2B was designed with car dealers in mind. Master Controllers are available with the dealer's own unique code so salespeople can control and demo any car on the lot. But when the car is sold and the User Controllers are learned, the Master Controller is automatically deleted!

KEY FEATURES

- Code learning, with Master Controllers:
 - Hundreds of codes are available specifically to use as Master Controllers. Use a different Master for each dealership
 - Either the Master Controller or the User Controller operates the immobilizer
 - Master and User Controller cannot operate the immobilizer at the same time
- Two User Controllers supplied with each unit:
 - Code learn up to 5 User Controllers
 - Code Wash™ deletes previous codes during code learning to prevent use of lost or stolen controllers
 - No moving parts or batteries required
- Immobilization of up to three electrical circuits (2 relays built-in)
- Fully automatic passive arming
- Patented security code for emergency disarm/code learning
- Simple to use valet function
- Flashing LED acts as a strong deterrent
- Mini tamper-proof housing, with all black wires for immobilizer circuits
- Disarm socket may be installed at any angle



USER CONTROLLER
Two included with each unit. Given to the consumer purchaser once the car is sold.

MASTER CONTROLLER
Red in color, with a tag indicating specific master code. All Master Controllers coded the same at the dealership lot. Master deleted once User coded in.

DEALER DELETE PLUG
Plugs into wire harness if immobilizer needs to be removed from the car.