


# ENFORCER®

## SH-715 Back-Up Battery Siren

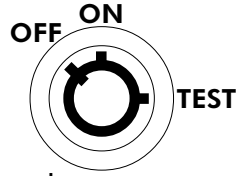

### Settings:

OFF Mode: Siren is silent and cannot be triggered.

ON Mode: Armed and waiting for trigger.

TEST Mode: Siren sounds to check the back-up battery.


### Ways To Activate The Back-Up Battery Siren:

In the "ON" mode, the back-up battery of the SH-715 is charging and will sound immediately if any of the following occurs:

1. The alarm is triggered or chirped.
2. Any of the siren's wires are cut.
3. The voltage of the RED power wire drops below 5V.

Note: The siren will sound for 3 - 5 minutes, then will automatically reset to conserve the back-up battery.

### Wiring Diagram:

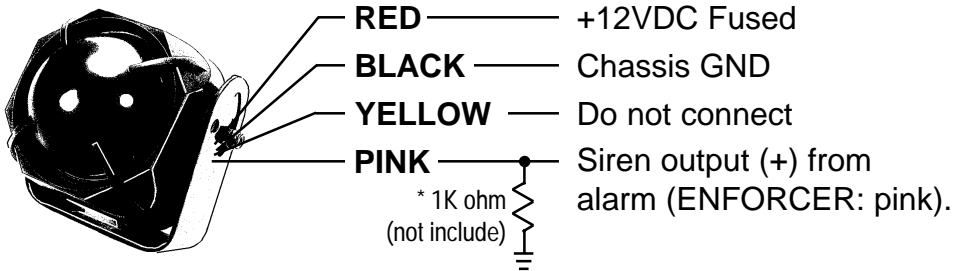

\* NOTE: 1K ohm resistor needed when:

\* Using or testing SH-715 by itself (without normal siren)

\* Using any non-ENFORCER products.

\* Using any of the following ENFORCER models: 100A5, 100A8, 100B, 200A5, 200A8, 300A8, 300B, 300N, 600 and 710.

The SECO-LARM policy is one of continual development. For that reason, SECO-LARM reserves the right to change prices and specifications without notice.

**SECO-LARM® U.S.A., INC.**

16842 Millikan Avenue,  
Irvine, CA 92606

ENFORCER® is a Registered Trademarks of SECO-LARM®.

Copyright © 2001 SECO-LARM®. All right reserved.

Tel: 800-662-0800, 949-261-2999

Fax: 949-261-7326

E-mail: [info@seco-larm.com](mailto:info@seco-larm.com)

Url: <http://www.seco-larm.com>