

Alarm Pager System

E-37EV

Features:

- Monitors up to three zones per premises or vehicle, plus manual paging
- Connect to nearly any type of burglar alarm control panel, vehicle alarm, communications panel, etc.
- One positive and two negative instant trigger inputs
- Range: Up to one half mile (4W output)
- Over two million possible coding combinations
- Belt-clip receiver included
- Code-learning receiver learns up to three transmitters
- Color LEDs (Green, Orange, or Red) on the receiver indicate which zone of the premises or vehicle was triggered
- Audible or vibrating page indicator
- EEPROM memory stores codes for up to one year without power
- · Stores the last six pages for easy recall
- Unattended page indicator
- Low battery indicator
- Receiver uses two AAA batteries (not included)
- Extra vibrating receiver available (E-37RV)
- Connect to a CB antenna, car AM radio antenna (adapter cable included), or external antenna (E-37ANT)

Note: Antenna required. Antenna not included.

Available Accessories:

E-37RV

 Spare receiver for E-37EV, with built-in audible or vibrating function for silent paging



E-37ANT

 Antenna plugs into the back of the transmitter for use where no existing AM or CB antenna is available, or where an existing antenna might be vandalized

16842 Millikan Ave • Irvine, CA 92606





Specifications:

Transmitter

# of codes		Over 2 million (factory pre-set)
Power		12VDC
RF output power		4W max.
Current	Standby	10mA
drain	Active	1A
Frequency		27MHz
Antenna impedance		50 Ω
Range		Up to 1/2 mile in open air1
Dimensions		4 ¹ / ₈ "x3 ¹ / ₈ "x1 ⁵ / ₁₆ " (105x79x33 mm)
Weight		5.1-oz (145g)

¹Actual range may vary depending on the environment, installation, and/or antenna.

Receiver

# of codes		Learns up to 3 transmitter codes
Power		3VDC (2 AAA batteries) ²
Battery life		Approx. 1 month ³
Current	Standby	1mA
drain	Active (Beep)	20mA
urairi	Active (Vibrate)	50mA
Dimensions		3"x2 ¹ / ₈ "x ⁵ / ₈ " (76x54x16 mm)
Weight		1.6-oz (45g) (without battery)

² Batteries not included





Tel: 949-261-2999 / 800-662-0800 • Fax: 949-261-7328


³ Based on 5 transmissions/day



Software Features:

Model		E-37EV
Trigger Indication		Colored LEDs and beeps
Transmitter Indication		'PAGE' LED flashes Red, Green or Orange
Positive Trigger Input	LED Indicator	'ZONE' LED flashes Green
	Audible Indicator	Beeps in groups of 9 for 1 minute
	Vibration Indicator	Vibrates in groups of 9 for 1 minute
Negative Trigger Input 1	LED Indicator	'ZONE' LED flashes Red
	Audible Indicator	Beeps in groups of 9 for 1 minute
	Vibration Indicator	Vibrates in groups of 9 for 1 minute
Negative Trigger Input 2	LED Indicator	'ZONE' LED flashes Orange
	Audible Indicator	Beeps in groups of 9 for 1 minute
	Vibration Indicator	Vibrates in groups of 9 for 1 minute
	LED Indicator	'ZONE' LED flashes Green
Manual Page	Audible Indicator	Beeps in 3 groups of 3 for 1 minute
	Vibration Indicator	Vibrates in 3 groups of 3 for 1 minute
	LED Indicator	'ZONE' LED will not be lit
Power ON	Audible Indicator	Beeps in 3 groups of 3 for 1 minute
	Vibration Indicator	Vibrates in 3 groups of 3 for 1 minute
Low Battery Indicator		Beep/vibrate twice every 60 seconds or when □/☑/off switch is pushed
Memory Indicator		Three continuous beeps/vibrates if no signals or at the end of all signals Beep/vibrate if the signal is an alarm page, will not beep/vibrate for manual page
Unattended Page Indicator		Beep/vibrate once every 30 seconds after initial signal is received. Will continue to beep until □/□/□/off switch is pushed

Basic Wiring Diagram:

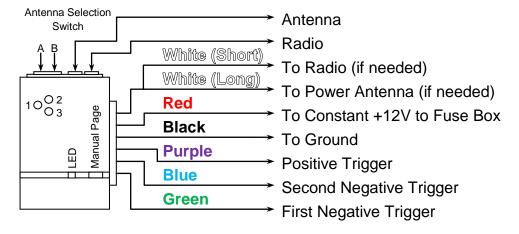





Tel: 949-261-2999 / 800-662-0800 • Fax: 949-261-7328

16842 Millikan Ave • Irvine, CA 92606