

## Alarm Pager System

### E-37EV

#### Features:

- Monitors up to three zones per premises or vehicle, plus manual paging
- Connect to nearly any type of burglar alarm control panel, vehicle alarm, communications panel, etc.
- One positive and two negative instant trigger inputs
- Range: Up to one half mile (4W output)
- Over two million possible coding combinations
- Belt-clip receiver included
- Code-learning receiver learns up to three transmitters
- Color LEDs (Green, Orange, or Red) on the receiver indicate which zone of the premises or vehicle was triggered
- Audible or vibrating page indicator
- EEPROM memory stores codes for up to one year without power
- Stores the last six pages for easy recall
- Unattended page indicator
- Low battery indicator
- Receiver uses two AAA batteries (not included)
- Extra vibrating receiver available (E-37RV)
- Connect to a CB antenna, car AM radio antenna (adapter cable included), or external antenna (E-37ANT)

Note: Antenna required. Antenna not included.

#### Available Accessories:


##### E-37RV

- Spare receiver for E-37EV, with built-in audible or vibrating function for silent paging



##### E-37ANT

- Antenna plugs into the back of the transmitter for use where no existing AM or CB antenna is available, or where an existing antenna might be vandalized



#### Specifications:

##### Transmitter

# of codes	Over 2 million (factory pre-set)	
Power	12VDC	
RF output power	4W max.	
Current drain	Standby	10mA
	Active	1A
Frequency	27MHz	
Antenna impedance	50 Ω	
Range	Up to 1/2 mile in open air <sup>1</sup>	
Dimensions	4 1/8" x 3 1/8" x 1 5/16" (105x79x33 mm)	
Weight	5.1-oz (145g)	

<sup>1</sup> Actual range may vary depending on the environment, installation, and/or antenna.

##### Receiver

# of codes	Learns up to 3 transmitter codes	
Power	3VDC (2 AAA batteries) <sup>2</sup>	
Battery life	Approx. 1 month <sup>3</sup>	
Current drain	Standby	1mA
	Active (Beep)	20mA
	Active (Vibrate)	50mA
Dimensions	3" x 2 1/8" x 5/8" (76x54x16 mm)	
Weight	1.6-oz (45g) (without battery)	

<sup>2</sup> Batteries not included

<sup>3</sup> Based on 5 transmissions/day

## SECO-LARM

16842 Millikan Ave • Irvine, CA 92606

Tel: 949-261-2999 / 800-662-0800 • Fax: 949-261-7326

sales@seco-larm.com • www.seco-larm.com




Copyright 2019 © SECO-LARM U.S.A., Inc. All rights reserved. The SECO-LARM policy is one of continual development. For that reason, SECO-LARM reserves the right to change prices and specifications without notice. SECO-LARM is not responsible for misprints.

SECO-LARM® CRIMEBUSTER® CBA® SLI®

## Audible and Visual Signals Chart

Model	E-37EV	
Trigger Indication	Colored LEDs and beeps	
Transmitter Indication	'PAGE' LED flashes Red, Green or Orange	
Positive Trigger Input	LED Indicator	'ZONE' LED flashes Green
	Audible Indicator	Beeps in groups of 9 for 1 minute
	Vibration Indicator	Vibrates in groups of 9 for 1 minute
Negative Trigger Input 1	LED Indicator	'ZONE' LED flashes Red
	Audible Indicator	Beeps in groups of 9 for 1 minute
	Vibration Indicator	Vibrates in groups of 9 for 1 minute
Negative Trigger Input 2	LED Indicator	'ZONE' LED flashes Orange
	Audible Indicator	Beeps in groups of 9 for 1 minute
	Vibration Indicator	Vibrates in groups of 9 for 1 minute
Manual Page	LED Indicator	'ZONE' LED flashes Green
	Audible Indicator	Beeps in 3 groups of 3 for 1 minute
	Vibration Indicator	Vibrates in 3 groups of 3 for 1 minute
Power ON	LED Indicator	'ZONE' LED will not be lit
	Audible Indicator	Beeps in 3 groups of 3 for 1 minute
	Vibration Indicator	Vibrates in 3 groups of 3 for 1 minute
Low Battery Indicator	Beep/vibrate twice every 60 seconds or when switch is pushed	
Memory Indicator	Three continuous beeps/vibrates if no signals or at the end of all signals Beep/vibrate if the signal is an alarm page, will not beep/vibrate for manual page	
Unattended Page Indicator	Beep/vibrate once every 30 seconds after initial signal is received. Will continue to beep until switch is pushed	

## Basic Wiring Diagram:

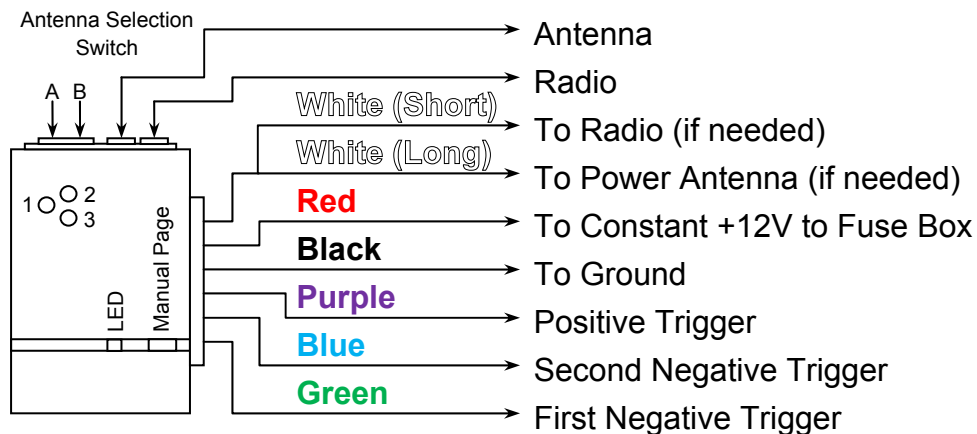

## SECO-LARM

16842 Millikan Ave • Irvine, CA 92606  
 Tel: 949-261-2999 / 800-662-0800 • Fax: 949-261-7326  
 sales@seco-larm.com • www.seco-larm.com



Copyright 2019 © SECO-LARM U.S.A, Inc. All rights reserved.  
 The SECO-LARM policy is one of continual development. For that reason, SECO-LARM reserves the right to change prices and specifications without notice. SECO-LARM is not responsible for misprints.

SECO-LARM® CRIMEBUSTER® CBA® SLI®