

ENFORCER®

Multi-Purpose Programmable Timer

SA-025Q

Installation Manual



The SA-025Q Programmable Timer Module is suitable for a wide range of timed security and access control operations. Auto-sensing of input voltage and DIP switches for programming make installation easy.

- Timer can be set from 1 second to 60 minutes
- Can be triggered via an N.O. positive (+) trigger input signal or an N.C. negative (-) trigger device or by powering up the unit
- Relay can be programmed to activate at the start or at the end of the timing cycle
- Relay can also be set to activate for one second at the end of the timing cycle
- Relay can be programmed to pulse (flash) or be steady on
- Built-in reset function to manually reset timing cycle
- Form-C relay, contact rated 10A@24VDC/250VAC
- LED indicates relay is energized
- 12~24VDC operation (auto sensing)
- Current draw – Less than 1mA (standby) or 40mA (relay energized)
- Functions programmed via DIP switches – no jumpers to cut

Parts List

1x Timer 2x Mounting tape 1x 1kΩ resistor 1x Manual

Specifications

Operating voltage	12~24 VDC (auto sensing)
Current draw	40mA@12VDC, 80mA@24VDC
Active	
Standby	<1mA@12VDC, <10mA@24VDC
Relay contact	1x Form C NO/NC/COM, 10A@24VDC/250VAC
LED Indicator	1x, Indicates relay is triggered
Operating humidity	5~95% non-condensing
Operating temperature	-40°~185° F (-40°~85° C)
Dimensions	2 ¹¹ / ₁₆ "x3 ¹ / ₄ "x1 ¹ / ₁₆ " (68x83x27.5 mm)
Weight	3.2-oz (93g)

Wiring and DIP Switch Settings

The timer is programmed via a series of DIP switches as shown in Fig. 1. The wiring is as described below, but also refer to the *Sample Applications* on pg. 3.

1. **TRG** – N.O. positive (+) trigger input signal **OR** N.O. negative (–) trigger input signal (included 1kΩ resistor is required).
2. **(–)** – Ground input
3. **(+)** – 12~24VDC positive (+) input
4. **NO** – Relay output (N.O., normally open)
5. **COM** – Relay output (common)
6. **NC** – Relay output (N.C., normally closed)

Fig. 1 – DIP Switch Settings

Switch	OFF	ON
1	Fixed 1 sec. Relay output time	Variable Relay output time
2	Relay energizes at start of timing cycle	Relay energizes at end of timing cycle
3	REPEAT timing cycle	SINGLE timing cycle
4	Timing in MINUTES	Timing in SECONDS
5	Timing controlled by TRG input	Timing controlled by Power Up
6	Counter begins at START of TRG	Counter begins at END of TRG

NOTES

- The PCB text is abbreviated due to space.
- Normally, DIP switch 1 functions as an instant/delay control, but when turned ON, its function depends on how DIP switch 3 is set.

DIP Switch		Function
1 OFF	–	1 sec momentary output
1 ON	3 ON	Relay output latches on
1 ON	3 OFF	Relay output equals 1 sec

Setting the Timer


The relay output time can be programmed for either 1~60 seconds, or 1~60 minutes (depending on DIP switch 4), using the round, black thumbwheel.

1. Set DIP switch 4 according to whether the timing should be measured in seconds or minutes (see Fig. 1).
2. Turn the thumbwheel clockwise to increase duration or counter-clockwise to decrease duration.
3. Test the duration and make adjustments as needed.

NOTE: Be sure to carefully test the duration to ensure that it is suitable for your needs.

Sample Applications

Following are a few possible applications. You may want to experiment with the DIP switch settings.

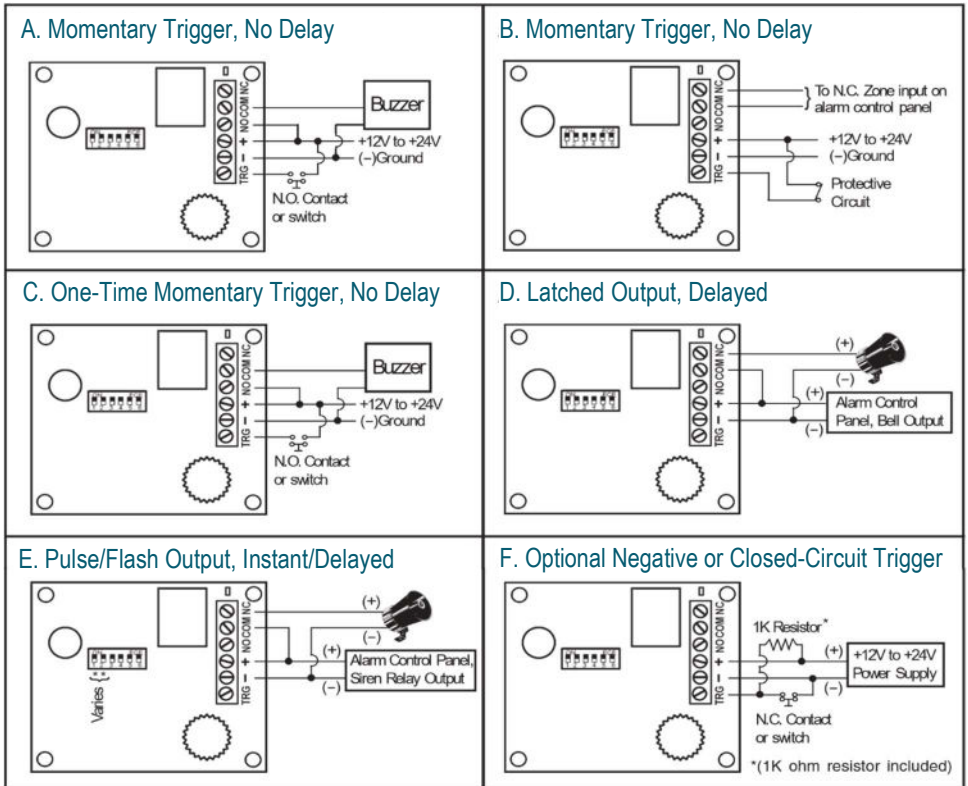

A. Momentary Trigger, No Delay (for timed annunciator or supervisory circuit)

a. DIP switch settings

1	2	3	4	5	6
ON	OFF	ON	(ON or OFF)	OFF	OFF

- b. **Action** – If the TRG terminal is momentarily connected to (+), the relay output immediately turns on and remains on for the duration set by the timer, after which it turns off regardless of whether the trigger is connected or disconnected.

NOTE: If the momentary trigger time is less than the timer's set duration, the relay is triggered only once. If longer than the timer time, the relay is activated again when the trigger is removed.

- c. **N.O. vs. N.C.** – For a timed door annunciator, connect a buzzer/chime to the N.O. and COM outputs. For a closed-loop supervisory circuit, connect a dialer/transmitter to the N.C. and COM outputs.

B. Momentary Trigger, No Delay (for swinger eliminator)

a. DIP switch settings

1	2	3	4	5	6
ON	OFF	ON	(ON or OFF)	OFF (or ON)	ON

- b. **Action** – If the TRG terminal is momentarily connected to (+), the relay output immediately turns on and stays on for as long as the TRG terminal is connected to (+). Once the TRG connection is broken, the relay output remains activated for the timer's set duration and then turns off.

Sample Applications (Continued)

- c. **Triggered by powering up** – If DIP switch 5 is set to ON, the output works the same, but instead of triggering via the TRG terminal, the timer is triggered by powering it up. Once powered up, the relay remains activated for the time set by the timer or until power is removed, whichever comes first.

C. One-Time, One-Second Momentary Trigger, No Delay

a. DIP switch settings

1	2	3	4	5	6
OFF	OFF	ON	(ON or OFF)	OFF (or ON)	ON

- b. **Action** – If the TRG terminal is momentarily connected to (+), the output activates for about 1 second. To reset, disconnect the TRG from (+) for at least 2 seconds. The timer has no effect.
- c. **Triggered by powering up** – If DIP switch 5 is set to ON, the output works the same, but instead of being triggered by the TRG terminal, the timer is triggered by being powered up.

D. Latched Output, Delayed

a. DIP switch settings

1	2	3	4	5	6
ON	ON	ON	(ON or OFF)	OFF (or ON)	OFF

- b. **Action** – If the TRG terminal is connected to (+) for the time set by the timer, the relay activates and remains activated. To reset the latched relay, connect the TRG terminal momentarily to (+) again.
- c. **Triggered by powering up** – If DIP switch 5 is set to ON, the delay duration set by the timer starts when the timer is powered up. At the end of the delay, the relay latches on and remains on until the timer is disconnected from power.

E. Pulsing or Flashing Output, Instant or Delayed

a. DIP switch settings

1	2	3	4	5	6
ON or OFF	OFF (or ON)	OFF	(ON or OFF)	OFF (or ON)	OFF

- b. **Action** – If the TRG terminal is connected to (+) momentarily, the timer starts pulsing/flashing after the time set. The pulse/flash output lasts until the TRG terminal is disconnected from (+).
- c. **Triggered by powering up** – If DIP switch 5 is set to ON, the output works the same, but instead of triggering via the TRG terminal, the timer itself is triggered by being powered up.
- d. **Instant/delay start** – If DIP switch 2 is set to ON, the timer waits for the set time after being triggered or powered up, then starts pulsing/flashing. If DIP switch 2 is set to OFF, the time starts pulsing/flashing as soon as it is triggered or powered up.
- e. **Relay output time** – If DIP switch 1 is set to ON, the relay on/off duration follows the timer setting. If DIP switch 1 is set to OFF, the relay on duration is 1 second and the off follows the timer setting.

F. Optional Negative or Closed-Circuit Trigger

If a closed-circuit negative trigger is required, the included 1kΩ resistor must be installed as shown.

IMPORTANT: Users and installers of this product are responsible for ensuring that the installation and configuration of this product complies with all national, state, and local laws and codes. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or codes.

California Proposition 65 Warning: These products may contain chemicals which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for one (1) year from the date of sale to the original customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM and the purchaser's exclusive remedy, shall be limited to the replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damage of any kind to the purchaser or anyone else.

NOTICE: The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2023 SECO-LARM U.S.A., Inc. All rights reserved.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606
Phone: (949) 261-2999 | (800) 662-0800

Website: www.seco-larm.com
Email: sales@seco-larm.com

 PITSWI
Order Part# 760-100-5%
MI_SA-025Q_230828.docx